


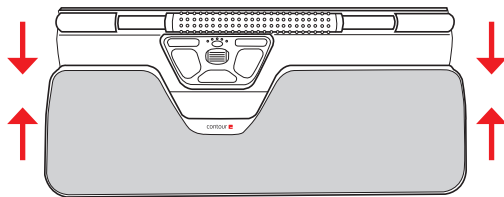

4

Push both units together until you hear the Red Plus Palm Support snap into the groove on both sides, between the arrows.



Contour Design, Inc.  
10 Industrial Drive  
Windham, New Hampshire 03087, USA  
Phone: 800-462-6678, 603-893-4556  
Email: [ergoinfo@contourdesign.com](mailto:ergoinfo@contourdesign.com)

Contour Design Europe A/S  
International House  
Center Boulevard 5  
2300 Copenhagen S., Denmark  
Phone: +45 32 46 11 20  
Email: [info@contour-design.com](mailto:info@contour-design.com)


This manual is available for download on  
[www.rollermouse.com](http://www.rollermouse.com) in the following languages:  
Danish, Swedish, Norwegian, Finnish, French, German

contour 

contour 

RollerMouse Red

Red Plus Palm Support  
User Guide

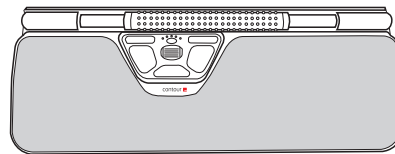




1


Make sure your RollerMouse Red is unplugged. Remove the short wrist rest if still attached, by using the enclosed key.

Insert key into slot next to arrow on bottom of RollerMouse Red. Turn in direction of arrow to release the short wrist rest at each end. Separate the units.

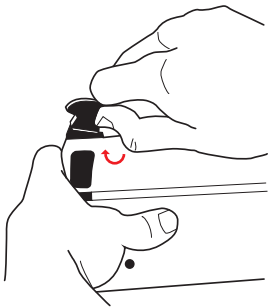

2

To attach Red Plus Palm Support, line up both units as shown. The tongue that runs along Red Plus Palm Support fits inside the groove that runs along front edge of RollerMouse Red, between the two red end caps.

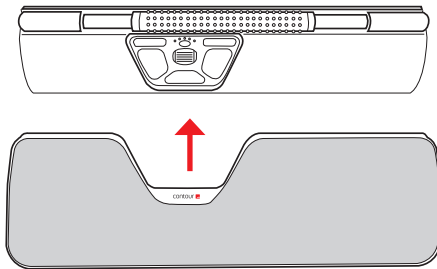

3

Insert the tongue into the groove. Side view of Red Plus Palm Support and the RollerMouse Red.

